大切に保管してください

N8115-07 EXPRESSBUILDER組込みキット 取り扱いの手引き

この度は、本製品をお買い上げいただきまして誠にありがとうございます。

本製品を取り扱う前に本書の内容をよく読み、指示に従ってください。また、本製品を取り付ける前に、取り付ける本体に添付の「ユーザーズガイド」に記載されている注意事項も参照してください。 また、増設にあたっては、最寄りの保守サービスセンターに依頼することをお勧めします。



安全上のご注意を無視する取り扱いを行うと、装置の故障、人体事故、火災・周囲の機器の損傷を引き起こす原因となることがあります。

オプションの取り付け、取り外し時は電源プラグをコンセントから抜き、外部装置と接続しているケーブルを外してください。 故障や感電する恐れがあります。



電源プラグを抜く



感電注意



分解禁止

本書に記載されている場合を除き、絶対に分解したり、修理・改造を 行ったりしないでください。装置が正常に動作しなくなるばかりでな く、感電や火災の危険があります。



発火注意



感電注意

構成品

項番	品名	数量	備考
1	内蔵USBフラッシュメモリ	1	
2	ネジ	1	
3	保証書	1	
4	EXPRESSBUILDER組込みキット 取り扱いの手引き	1	本書

取り扱い上の注意事項

本製品を箱から取り出した後は、次の注意事項を必ずお守りください。

- ほこりの多い場所や水などの液体のかかるおそれのある場所に置かないでください。
- 強い磁気を発生させるものの近くに置かないでください。

第三者への譲渡

本製品を第三者へ譲渡(または売却)する場合には、本書を一緒にお渡しください。


EXPRESSBUILDER組込みキットの取り付け

1. 準備確認事項


(1) 危険防止及び故障防止のため、作業を行なう際には本体装置の電源スイッチをOFFにし、電源プラグをコンセントから抜いてください。

2. 增設手順

- (1) 内蔵USBフラッシュメモリの取り付け準備
 - ①トップカバー(後)を固定している手ネジをゆるめ、装置背面へスライドさせて トップカバー(後)を取り外します。
 - ②標準ライザカードが取り付けられているブラケットをまっすぐ持ち上げて取り外します。
 - ③内蔵USBフラッシュメモリの取り付け位置を確認してください。

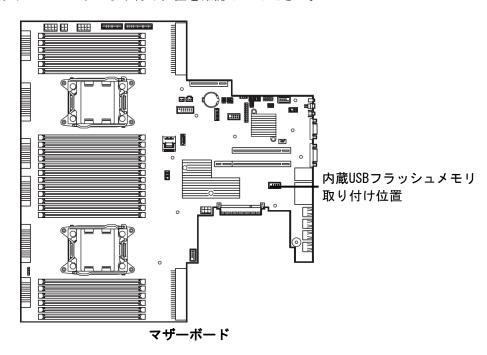

- (2) 内蔵USBフラッシュメモリの取り付け
 - ①MB上のコネクタに内蔵USBフラッシュメモリのコネクタをまっすぐ挿します。
 - ②添付のネジで固定します。

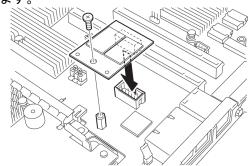



- 内蔵SUBフラッシュメモリやMBの端子部分には触れないでください。 汚れや油が付いた状態で取り付けると誤動作の原因になります。
- 内蔵SUBフラッシュメモリに過度の力を加えると内蔵SUBフラッシュメモリ やMBを破損するおそれがあります。

NEC

N8115-07 EXPRESSBUIDER 組込みキット 組み立て・取り扱いの手引き



N8115-07 Internal Flash Memory User's Guide

Congratulations for your purchase of this Internal Flash Memory.

The User's Guide is intended to allow you to install and use the Internal Flash Memory. N8115-07 correctly and safely. Read this manual thoroughly before handling the Internal Flash Memory. In addition, refer to this guide whenever you want to know how to use the Internal Flash Memory or some malfunction occurs. Always keep this guide at hand so that you can see it when necessary.

For the server in which the Internal Flash Memory is installed, refer to the User's Guide of the server. Read "Notes on Use" carefully before handling the Kit.



Indicates the presence of a hazard that may result in death or serious personal injury.

When you install the option or delete it, unplug the power cord and extract the cable that has connected to another one.

Otherwise, an electric shock or fire may be caused.



Unplug the power



Precaution against electric shock



Prohibition of disassembly

Do not disassemble, repair, or modify the server. Otherwise, an electric shock or fire may be caused.



Indicates that improper use may cause fire.



Precaution against electric shock

Composition article

No.	Name	Number	Comment
1	Internal Flash Memory	1	
2	Screw	1	
3	Internal Flash Memory User's Guide	1	This book.

Notes On Use

Please be sure to protect the following notes after picking out this product from a box.

- Do not use the server in the place where dust, water or liquid may pour.
- Do not use the server in the place where the strong electromagnetic waves generate

Transfer to Third Party

Make sure to provide this manual and all the accessories along with the product to a third party.


Installing N8115-07 in Server

1. Preparation point to be checked

- (1) Exit from the application programs and shutdown the system.
- (2) Turn off the power of the server and disconnect all the power cords from the receptacles.


2. Extension procedure

- (1)Attachment preparation of Internal Flash Memory.
 - (1) Remove the top cover (rear) according to the User's Guide of the server.
 - ②Lift straight up and remove the riser module assembly from the server.
 - 3 Check the Internal Flash Memory 's connector position on MB.

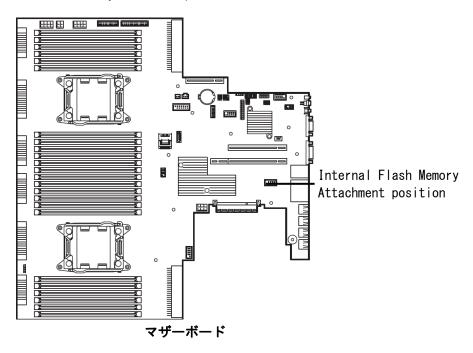

(2) Install of Internal Flash Memory

- 1. Insert Trusted Platform Module straightly to connector on MB.
- 2. Fixes by an attached screw.

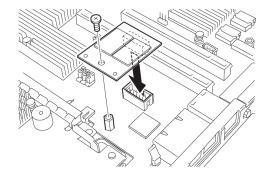



- Do not touch the terminals of the Internal Flash Memory and MB with your bare hand. Fingerprints and dust left on them cause the server to malfunction.
- Be careful not to apply excess force to a Internal Flash Memory or MB.
 Doing so may damage the card.

NEC N8115-07 Internal Flash Memory User's Guide

